



DAILY-WEEKLY DIGIYAL TIME SWITCH · OR 212 DI

Install on 35 mm DIN bar.

Automatic switch-on when is connected to the grid.
Default settings: AUTOMATIC mode, weekly settings,
AUTO* winter/summer automatic time settings, Italian language It,
30 minutes programming resolution.
When relay is ON display show ON.

SWITCH ON / OFF:

Press OK for 4 seconds.

MANUAL ON/OFF or AUTOMATIC :

AUTOMATIC operation acts when appear.

Press to set AUTOMATIC or MANUAL operation.

In MANUAL press for ON or OFF.

MENU: Press the Joystick in the middle at least 3 seconds,
navigate inside MENU using the Joystick.

1. TIME SETTING:

In the MENU, select and confirm **OK**, set the Month and move to set the Day, confirm **OK**,
Choose to confirm AUTO* **OK** or not, set the hour/minutes and confirm **OK**.

2. PROGRAMMING RESOLUTION: R

In the MENU select R and confirm **OK**, set 30 minutes or 1 minute. Press **OK** to confirm.

3. WEEKLY/DAILY: F

In the MENU select F and confirm **OK**, set 7 or 1 days. Confirm **OK**.

4. LANGUAGE: L

In the MENU select L and confirm **OK**, set En English or It Italian. Confirm **OK**.

5. PROGRAMS SETTINGS: PRG

In the MENU select PRG, and confirm, (if weekly mode is active select the day
to set and confirm **OK**), move to the desired hour, choose blinking ON or OFF to set or,
fixed ON/OFF to visualize programs. Confirm **OK**.

The selected day and the after are blinking, press **OK** to copy or to set it.

Press to exit.

6. LOCKING SETTING:

Push and keep hold at least 4 seconds, confirm **OK**, set the PASSWORD using the Joystick, confirm **OK**.

To unlock press two times insert the PASSWORD, confirm **OK**.




Device must be installed by a qualified person.

For more and detailed information, see the installer manual at tecnoswitch.com

Tecno Switch reserves the right to make changes to its products in each moment and without further notice.

Tecno Switch declines all responsibility for damage to things or persons derived from an incorrect or improper use of its products.

Electrical connections:

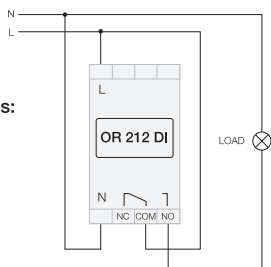

RESET:

