



## DAILY/WEEKLY DIGITAL TIME SWITCH -OR213DI Easy- 1c+

CONFORME ALLE NORME

IN CONFORMITY WITH NORMATIVES





LVD,EMC,ROHS,EN60730-2-7, EN60730-1, EN 60730-2-9, EN61000-3-2, EN 61000-3-3

### KEYS LEGEND Fig.1

1. Manual / Automatic Mode
2. OK OK
3. 5 Button Joystick
4. Reset

### DISPLAY LEGEND Fig.1

5. Set program (P/R/F/L) and **1234567** Day of the week
6. Daylight savings time (summer)
7. Time set
8. Current state of the segments: black= ON - white= OFF. Each segment indicates a program with a time ranging from 1 to 30 minutes.
9. Winter time
10. Manual Mode
11. Channel status: Closed = ON; Open = OFF
12. Settings: date; time; summer/winter time change

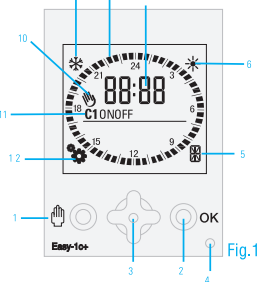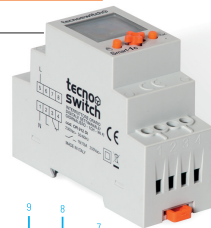


### FACTORY SETTINGS

Automatic mode; Weekly settings;  
Winter/Summer automatic time settings;  
Italian language; 30 minutes programming resolution.

### ELECTRICAL CONNECTIONS

Install on 35mm DIN bar.  
Automatic switch-on when connected to the grid.

### WIRING DIAGRAM

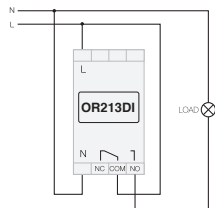

### SWITCH ON/OFF

Press OK for 4 seconds

### SETTING MANUAL (On/Off) / AUTOMATIC MODE:

Press to set MANUAL or AUTOMATIC operation.

= MANUAL MODE

In MANUAL mode press for ON or OFF .

### MENU: : P/R/F/L

### SETTINGS: DATE; TIME; SUMMER/WINTER TIME CHANGE

Press the joystick in the middle at least 3 seconds  $\rightarrow$  select using  $\rightarrow$  confirm with OK  $\rightarrow$  set the year using and confirm with OK  $\rightarrow$  set the month using , press to set the day using and confirm with OK  $\rightarrow$  set the hour/minutes using and confirm with OK  $\rightarrow$  ON appears.

Press OK to enable automatic summer / winter time change, otherwise select and confirm OFF.

N.B. Press to exit from menu.

### P: PROGRAMS SETTING

Press the joystick in the middle at least 3 seconds  $\rightarrow$  press and select **P**  $\rightarrow$  confirm with OK  $\rightarrow$  (Weekly mode; choose the day to set by pressing and confirm with OK)  $\rightarrow$  press to set the relay status ON/OFF; press to set the desired time slot to which the previously set relay status

will be assigned (black segments ON )  $\rightarrow$  complete programming and confirm with OK. The day just set and the next flash  $\rightarrow$  press OK to copy or press for a new configuration.

### R : PROGRAMMING RESOLUTION

Press the joystick in the middle at least 3 seconds  $\rightarrow$  press and select **R**  $\rightarrow$  confirm with OK  $\rightarrow$  set 1 - 30 minutes  $\rightarrow$  confirm with OK.

### F : DAILY/WEEKLY PROGRAM

Press the joystick in the middle at least 3 seconds  $\rightarrow$  press and select **F**  $\rightarrow$  confirm with OK  $\rightarrow$  set 7 (weekly) or 1 (daily)  $\rightarrow$  confirm with OK.

### L : LANGUAGE

Press the joystick in the middle at least 3 seconds  $\rightarrow$  press and select **L**  $\rightarrow$  confirm with OK  $\rightarrow$  set **It** Italian or **En** English  $\rightarrow$  confirm with OK.

### LOCKING SETTING

Hold down at least 5 seconds, **PASS** appears  $\rightarrow$  confirm with OK  $\rightarrow$  press to set the first two digits; press and set the last two digits using  $\rightarrow$  confirm with OK.

To unlock, press two times insert the PASSWORD  $\rightarrow$  confirm with OK.

Device must be installed by a qualified person.

For more and detailed information, see the installer manual at [tecnoswitch.com](http://tecnoswitch.com)  
Tecno Switch reserves the right to make changes to its products in each moment and without further notice.

Tecno Switch declines all responsibility for damage to things or persons derived from an incorrect or improper use of its products.



Pursuant to Legislative Decree No. 49 of March 14, 2014 "Implementation of Directive 2012/19/EU on waste electrical and electronic equipment (WEEE)", the user must provide the equipment with the essential components at the recycling centre for electronic and electro-technical devices or return it to the dealer when you purchase an equivalent appliance in one to one reason, or 1 to zero for equipment with a side lower than 25cm. The correct recycling helps to avoid possible negative effects on the environment and on health favoring the recycling of the materials that make up the equipment. The illegal disposal of the product by the user involves administrative sanctions as per Legislative Decree No. 49 of March 14, 2014.



REV. 4-21