



ASTRONOMICAL ELECTRONIC DIGITAL TIME SWITCH - 1 CHANNEL WIFI OR952DI

It's possible to use the device by APP downloadable from GOOGLE PLAY STORE and APPLE STORE.

WiFi CONNECTION:

Please download the free APP "OR952DI" from one of the Official Store, if you haven't it, and start it. You can activate the WiFi Hot Spot, on the device, by pressing a button or Joystick and wait a few seconds. The WiFi hot spot is active for 10 minutes if the device is not used. You can activate the WiFi on the smartphone, searching on the available networks, the OR952DI_XXXXXX (XXXXXX is the "MAC address" of the device). Select the device and connect to it. During the connection, you have to type password 88888888 (8 times) and confirm it.



PROGRAMMING:

Activate GPS on the smartphone.

Press to start the geolocation and wait for GPS coordinates appearing. (LAT.,LON.). it's possible to type manually the latitude and longitude.

Press to send program to OR952DI.

The time switch will be automatically set for switching on the load at Sunset and switching off load at the Sunrise.

It's possible to set switching off during the night: Press ,

press , press 00.00 and type star hour for switching off.

Press 00.00 and type end hour for switching off.

Press to program the time switch, a confirmation message appear as soon as procedure is complete.

Press two times then press to save program on the smartphone.

It's possible to load saved settings on smartphone pressing .

It's possible settings device always OFF pushing and after .

It's possible setting device always ON pushing and after .

To return to automatic function press and after .

RESET:

Press and hold by sharp object the button inside hole, under number 2, keep hold the button "1" and release the reset button. Holdind down the "1" button for at least 5 seconds, it will appears "r St". Then device will be reset.

EXTRA SETTINGS:

You can lock the device by PASSWORD pressing ,then you have to type 4 numbers PASSWORD and press .




You can unlock the device pressing , then you have to type 4 numbers PASSWORD and press .

You can set automatically daylight savings time pressing .

You can set manually daylight savings time pressing .

You can set astronomical OFFSET pressing , typing the minutes form -60 to +60 for Sunrise and / or Sunset and then press .

To return to the previous page press .

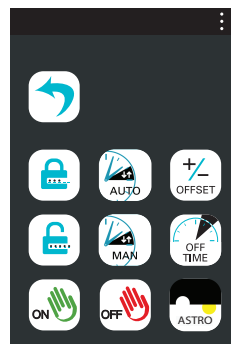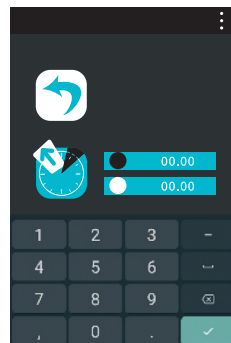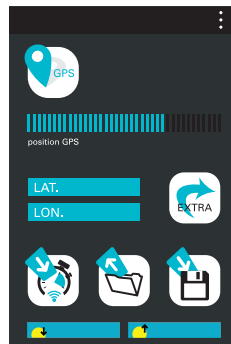

HELP MENU:

For information about single button press the right upper symbol optional menu (, or MORE)

Note: it's possible, pressing joystick, to show year, month, current day and the programmation.

Device must be installed by a qualified person.

For more and detailed information, see the installer manual on site. www.tecnoswitch.com.

Tecno Switch reserves the right to make changes to its products in each moment and without further notice.

Tecno Switch declines all responsibility for damage to things or persons derived from and incorrect or improper use of its product.

