



DAILY-WEEKLY DIGIYAL TIME SWITCH · OR 912 DI

It's possible to use the device via a downloadable APP from GOOGLE PLAY STORE and APPLE STORE.  

CONNECTION:

Activate the WiFi Hot Spot on the device by pressing a button Joystick, wait a few seconds.
The activation remains for 5 minutes at the unused device.

Activate the WiFi on the smartphone, search through visible networks the OR912DI_XXXXXX, (XXXXXX is the "MAC address" of the device).
Select the device and connect. In connection, enter the password 88888888 (8 times 8), confirm that you want to use the connection.
Open the OR912DI downloaded app from the Store.

PROGRAMMING:

To insert the programming press 

To change the day scroll left / right 

To insert the ON /OFF times press  and confirm 
Nb: Enter the separation point between hours and minutes.

To delete the programming click on the inserted program and press 

To copy the programming to another day use the functions "Copy & Paste" in the menu at the top right.

To save the program on the memory: go back HOME , press , insert a name and confirm 

To delete the file: in iOS, press  select it and press 

in Android, keep hold the name of the file until "Elimina file :: File delete .." Press "Sì::YES" to delete it.

To read a file press , select the file and confirm 

Now in the programming menu it's possible to modify it.

Now the device will contain the programming.

FILE TRANSFER:

Make sure that you are connected to the Time Switch (see CONNECTION).

To transfer the file to the device press 
the WiFi symbol and a counter will appears.

A confirmation message appear when the procedure is complete.

The data transfer takes about 15 seconds. In case of error, repeat the procedure.

MISCELLANEOUS SETTINGS:

To lock the device with PASSWORD press 

To unlock the device press  and enter the PASSWORD

To transfer the programming on Smartphone press 

To update date and time on the device, press 

To select the language: Italian , English 

To activate the automatic summer / winter time change press 

To set the manual summer / winter time change press 

To set the relay always ON press 


To set the relay always OFF press 

To return to AUTOMATIC operation press 


HELP MENU:

For more INFO access the HELP 

HOME

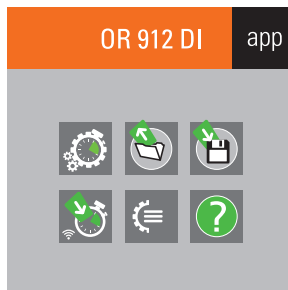

MISCELLANEOUS SETTINGS:

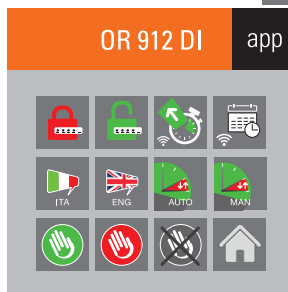

Device must be installed by a qualified person.

For more and detailed information, see the installer manual at [tecno**switch**.com](http://tecnoswitch.com)

Tecno Switch reserves the right to make changes to its products in each moment and without further notice.

Tecno Switch declines all responsibility for damage to things or persons derived from an incorrect or improper use of its products.

