



DAILY-WEEKLY DIGIYAL TIME SWITCH · OR 912 DI

Install on 35 mm DIN bar.

Automatic switch-on when it connected to the grid.

When system is operating display show **ON**.

Default settings: AUTOMATIC mode, WEEKLY SETTINGS, winter/summer automatic time settings, Italian language It, 30 minutes programming resolution. 0 minutes of Correction for both Sunrise and Sunset, Bari (IT) geographic coordinates. When relay is ON display show ON.

SWITCH ON / OFF:

Press OK for 4 seconds.

MANUAL ON/OFF or AUTOMATIC:

MANUAL operation acts when appear.

Press to set AUTOMATIC or MANUAL operation.

In MANUAL press for ON or OFF.

MENU: Press the Joystick in the middle at least 3 seconds, navigate inside MENU using the Joystick.

1. LANGUAGE: L

In the MENU select L and confirm **OK**, set En English or It Italian. Confirm **OK**.

2. TIME SETTINGS:

In the MENU, select and confirm **OK**, set the Year, the Month and move to set the Day, confirm **OK**, Choose to confirm **OK** or not, set the hour/minutes and confirm **OK**, choose if confirm automatic winter/summer time change or not

3. PROGRAMMING RESOLUTION: R

In the MENU select R and confirm **OK**, set 30 minutes or 1 minute. Press **OK** to confirm.

4. WEEKLY/DAILY: F

In the MENU select F and confirm **OK**, set 7 or 1 days. Confirm **OK**

5. PROGRAMS SETTINGS: P

In the MENU select P and confirm **OK**, (if weekly mode is active select the day to set and confirm), move to the desired hour, choose blinking **ON** or **OFF** to set or, fixed ON/OFF to visualize programs. Confirm **OK**. The selected day and the after are blinking, press **OK** to copy or to set it. Press to exit.

6. LOCKING SETTING:

Push and keep hold at least 4 seconds, confirm **OK**, set the PASSWORD, confirm **OK**. To unlock press two times insert the PASSWORD with the Joystick, confirm **OK**.




Device must be installed by a qualified person.

For more and detailed information, see the installer manual at [tecno**switch**.com](http://tecnoswitch.com)

Tecno Switch reserves the right to make changes to its products in each moment and without further notice.

Tecno Switch declines all responsibility for damage to things or persons derived from an incorrect or improper use of its products.

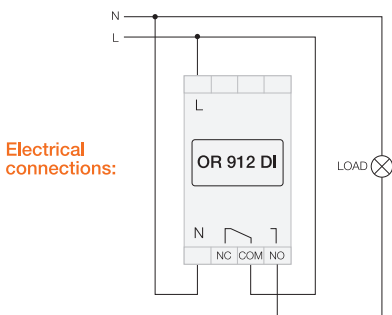

Electrical connections:

