



2 CANALES WI-FI DAILY/WEEKLY TIME SWITCH · OR942DI

It's possible to use the device via a downloadable APP from GOOGLE PLAY STORE and APPLE STORE.

CONNECTION:

Activate the WiFi Hot Spot on the device by pressing a button Joystick, wait a few seconds. The activation remains for 5 minutes at the unused device.
Activate the WiFi on the smartphone, search through visible networks the OR942DI_XXXXXX, (XXXXXX is the "MAC address" of the device).
Select the device and connect. In connection, enter the password 88888888 (8 times 8), confirm that you want to use the connection.
Open the OR942DI downloaded app from the Store.

PROGRAMMING:

To insert the programming press , to select the channel press C1 or C2.

To choose the day or the Holiday program scroll left/right 

It's possible add an Holiday program at the same way of any other normal day of the week.

To return to the HOME press 

To insert the ON/OFF times press 

Once the ON time is inserted is possible add a Pulse with a duration from 1 to 59s by pressing

Confirm . In iOS there is a keyboard icon.

To delete the programming press on the inserted program and press 

To copy the programming to another day use the functions" Copy & Paste" in the menu at the top 

To save the program on the memory: go back HOME , press , insert a name and confirm

To delete the file: in iOS press , select the file and press ,

in Android keep hold the name of the file until "Elimina file :: File delete .." is show. Press "Si::YES" to delete it.

To read a file press , from the home page, select the file and confirm 

To program the OR942DI go to HOME page and press 

A confirmation message appear when the procedure is complete

RESET:

Press and keep hold with a pointed object the key inside the hole's reset, keep hold the key "1" and release the reset key
Continuing to hold down the "1" key for at least another 5 seconds "r St" appears. The device will be reset

MISCELLANEOUS SETTING:

To lock the device with PASSWORD press 

To unlock the device press  and enter the PASSWORD

To update date and time on the device press 

To activate the automatic summer/winter time change press 

To set the manual summer/winter time change press 

To set the relay always ON press 

To set the relay always OFF press 

To return to the AUTOMATIC operation press  for C1 and  for C2



To insert the HOLIDAY program press  for C1 and  for C2

MENU' HELP:

For more INFO access the HELP



REV 07-18

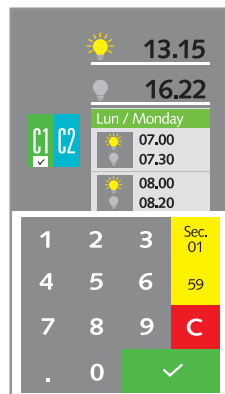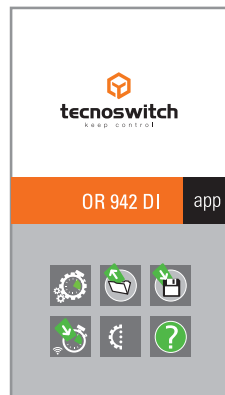

Nota: Is possible, by pressing the joystick, to show year, month, actual day and the programming of C1 and C2.
Device must be installed by a qualified person.

For more and detailed information, see the installer manual at tecnoswitch.com.

Tecno Switch reserves the right to make changes to its products in each moment and without further notice.

Tecno Switch declines all responsibility for damage to things or persons derived from an incorrect or improper use of its products.