
WALL MOUNTED WEEKLY TOUCH PROGRAMMABLE THERMOSTAT - CR035BI

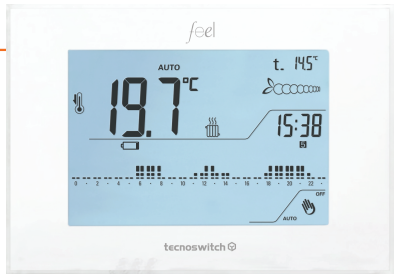

COMMANDS AND INDICATIONS

KEYS LEGEND Fig.1

1. Menu
2. Increase
3. Decrease
4. OK Confirm
5. Scrolls the next icons
6. ON/OFF - Manual/Automatic

DISPLAY LEGEND Fig.1

7. Temperature levels
8. 1 2 3 4 5 6 7 Days of week indicator
9. Current time (Clock)
10. Energy consumption savings indicator
11. Set temperature
12. Set temperature thresholds
13. Cooling mode
14. Heating mode
15. Ambient temperature
16. AUTO Automatic Mode
17. P Set temperature levels
18. Statistics
19. COUNT-DOWN
20. Frost protection
21. Manual Mode
22. OFF: OFF
23. Low battery. When the icon appears batteries must be replaced within 15 days.

Note: When the programmable thermostat is in Stand-by, press OFF/AUTO to start the backlight. Now it can be set.

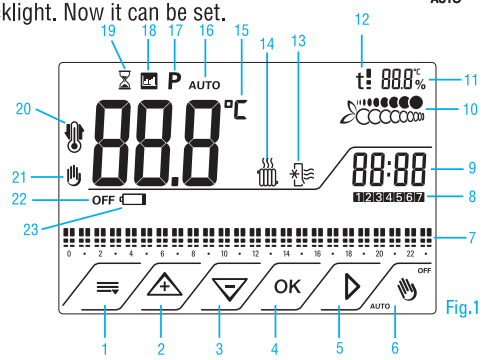


Fig.1

INSTALLATION

The device must be positioned about 1.5 meters above the floor, avoiding heat sources, windows and doors.
It must be installed on the wall or on recessed boxes with 2 or 3 modules, in dry places.

To install the programmable thermostat it is necessary:

- Unhook the base from the thermostat. Fig.1A e 2A
- Fix the base to the wall. Fig.3A
- Connect the external temperature probe.
- Hook the base to the wall. Fig.4A
- Fit n.2 the batteries Alkaline AA of 1,5 V in the compartment, ensuring that the polarities are correct as indicated. Fig.5A
  Battery lifetime: about 1 year with long-life battery.

WIRING DIAGRAM

- Connect the load to the terminlas following the wiring diagram. Fig.1B e 2B

ASSEMBLY INSTRUCTION

Fig.1A



Fig.2A

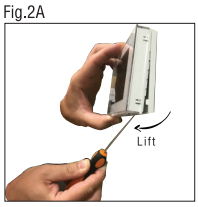


Fig.3A

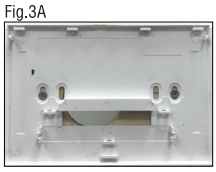
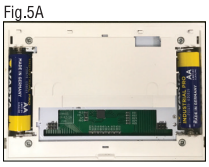


Fig.4A



Fig.5A



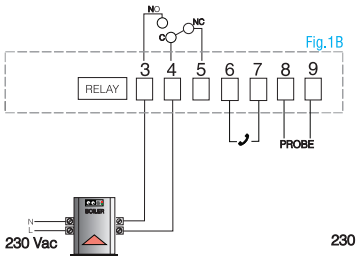


Fig.1B

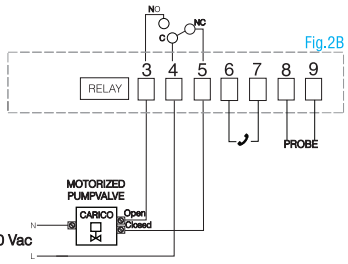


Fig.2B

FACTORY SETTING

For faster use, the programmable thermostat is supplied with set programs:

- Heating program,
  Temperature levels:
  t. (T1) = 14°C – t: (T2) = 18°C – t! (T3) = 22°C
- Cooling Program,
  Temperature levels:
  t. (T1) = 24°C – t: (T2) = 26°C – t! (T3) = 28°C
- Frost protection function: + 5° C settable, active only in heating mode.
- Set temperature for Manual mode: +22°C.

FUNCTION ON / OFF

Press OFF/AUTO for at least 4 seconds

SET DAY AND TIME

Press the icons in sequence: OFF/AUTO → ≡ the clock flashes → confirm with OK → use △ or ▽ to set hour / minutes → confirming with OK, it day value 1 (Monday) flashes → press △ or ▽ to select the desired day that will start to flash → confirm with OK.

DAILY PROGRAMMING OF TEMPERATURES

It can customize the temperature levels at 30 minute intervals.
Press the icons in sequence: OFF/AUTO → ≡ → ▷ up to position on **P** → pressing OK, the day value 1 flashes → confirm with OK → use △ or ▽ to set the desired temperature range at that time → Press ▷ to move on the next half hour, choose the desired temperature range and continue in the same way until you reach 11:30 p.m → pressing OK, the days 1 and 2 flash alternately. Now you can:
a) Copy the program from Monday 1 to Tuesday 2 pressing OK,
b) set the Tuesday program 2 pressing ▷ and confirm with OK.
Repeat the steps to copy/set the other days.

SYSTEM STATUS

Heating/Cooling System ON: /
Heating/Cooling System OFF: /

TEMPERATURE SETTING

By pressing △ or ▽ it is possible to vary the temperature between +2 and + 35 ° C, in steps of 0.1°C.

LOCK SETTING

The programmable thermostat is provided with a 3 digit Lock Code.
Press the icons in sequence: OFF/AUTO → (OFF/AUTO + △) for 4 seconds up to position on **PAS** → use △ or ▽ to set the first digit → press ▷ → use △ or ▽ to set to other two digits → confirm with OK. To deactivate it, repeat the same steps.

RESET

Press the icons in sequence: OFF/AUTO → (≡ + OFF/AUTO) for 4 seconds and **rSt** appears.

For more information consult the installer manual on our website (tecnoswitch.com).

tecnoswitch

Pursuant to Legislative Decree No. 49 of March 14, 2014 "Implementation of Directive 2012/19 / EU on waste electrical and electronic equipment (WEEE)" The "crossed out wheelie bin" WEEE symbol on the appliance show that the product at the end of its useful life must be collected separately from other waste Therefore, the user must provide the equipment with the essential components at the recycling centre for electronic and electrotechnical devices or return it to the dealer when you purchase an equivalent appliance in one to one reason, or 1 to zero for equipment with a side lower than 25cm. The correct recycling helps to avoid possible negative effects on the environment and on health favoring the recycling of the materials that make up the equipment. The illegal disposal of the product by the user involves administrative sanctions as per Legislative Decree No. 49 of March 14, 2014.

CE REV. 17-21

tecnoswitch.com
arealed.it
Via P. Leone Dehon, 99/105 · 76123 Andria (BT) ITALY
tel (+39) 0883 555323 · fax (+39) 0883 555323