




ASTRONOMICAL DIGITAL TIME SWITCH - OR253DI AstroEasy+

CONFORME ALLE NORME

IN CONFORMITY WITH NORMATIVES





LVD, EMC, RoHS, EN 60730-1, EN 61000-3-2, EN 61000-3-3, EN 60730-2-9

KEY LEGEND Fig.1

1. Manual / Automatic Mode
2. OK OK
3. 5 Buttons joystick
4. Reset

DISPLAY LEGEND Fig.1

5. Set program (P / R / L) and 1234567 Day of the week
6. * Daylight savings time (summer)
7. 88:88 Time set
8. * Current state of the segments: ■ black = ON - □ white = OFF.
Each segment indicates a program with a time ranging from 1 to 30 minutes.
9. * Winter Time
10. Manual Mode
11. C1ONOFF Channel status: Closed= ON; Open=OFF
12. Settings

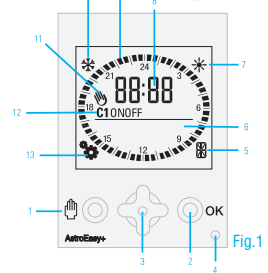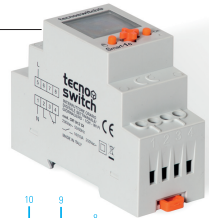

FACTORY SETTINGS


Astronomical; Automatic mode; Weekly settings; Winter/Summer automatic time settings; Italian language; 30 minutes programming resolution; 0 minute time correction; Time zone +1; Geographic coordinates: Bari.

ELECTRICAL CONNECTIONS

Install on 35mm DIN bar.

Automatic switch-on when connected to the grid.

WIRING DIAGRAM

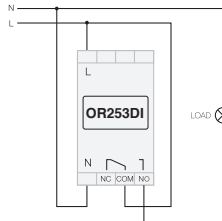

SWITCH ON/OFF

Press OK for 4 seconds.

AUTOMATIC/MANUAL (On/Off) MODE

Press to set MANUAL or AUTOMATIC operation.

= MANUAL MODE

In MANUAL mode press for ON or OFF .

MENU: : P / R / L

SETTINGS

Press the joystick in the middle at least 3 seconds → select using → confirm with OK → set the year using and confirm with OK → set the month using , press , set the day using and confirm with OK → press OK to enable automatic summer / winter time change, otherwise select OFF using and confirm with OK → set the hour/minutes using and

confirm with OK → "I" flashes. Press OK, set the post code by entering the first and last 2 digits and confirm with OK → "C" (sunrise and sunset correction) flashes. Press OK → "a" flashes. Press OK to set the advance/delay at sunrise using and confirm with OK → Press OK to set the advance/delay at sunset using and confirm with OK.

P: PROGRAMS SETTING

Press the joystick in the middle at least 3 seconds → press and select P → confirm with OK → the display shows the astronomical programming. To change it press to set the relay status ON/OFF → press to set the desired time slot to which the previously set relay status will be assigned (black segments ON).

→ confirm with OK → LU appears. Press to activate (ON)/deactivate (OFF) the relay status and repeat the previous operation → completed programming, press OK.

R: PROGRAMMING RESOLUTION

Press the joystick in the middle at least 3 seconds → press and select R → confirm with OK → set 1 - 30 minutes → confirm with OK.

L: LANGUAGE

Press the joystick in the middle at least 3 seconds → press and select L → confirm with OK → set It Italian or En English → confirm with OK.

LOCKING SETTING

Hold down at least 5 seconds, PASS appears → confirm with OK → press to set the first two digits; press and set the last two digits using → confirm with OK.
To unlock it, press two times insert the PASSWORD → confirm with OK.

Device must be installed by a qualified person.

For more and detailed information, see the installer manual at tecnoswitch.com
Tecno Switch reserves the right to make changes to its products in each moment and without further notice.

Tecno Switch declines all responsibility for damage to things or persons derived from an incorrect or improper use of its products.

Pursuant to Legislative Decree No. 49 of March 14, 2014 (Implementation of Directive 2012/19 / EU on waste electrical and electronic equipment (WEEE)), the producer of the product (WEEE symbol) at the end of its useful life must be collected separately from other waste. Therefore, the user must provide the equipment with the essential components at the recycling center for electronic and electrical devices or return it to the dealer when you purchase an equivalent appliance in order to ensure, or 1) to avoid for equipment with a life span of more than 25 years, the correct recycling rules to avoid possible negative effects on the environment and on health favoring the recycling of the materials that make up the equipment. The final disposal of the product by the user involves administrative sanctions as per Legislative Decree No. 49 of March 14, 2014.



REV. 4/21